

● GPS

- 1 Press **TOOL**
- 2 Choose **GPS** to view satellite data and speed



● Slope

- 1 Press **TOOL**
- 2 Choose **SLOPE**
- 3 Roll **OK** key to turn slope measuring mode **ON**
- 4 Input land sloping angle



● On Truck

- 1 Press **TOOL**
- 2 Choose **ON TRUCK**
- 3 Roll **OK** key to turn on truck mode **ON**
- 4 Input the width of **GPS** to the edge of land
- 5 Press **OK** at departure point to start
- 6 Press **OK** again at destination to end



● Regular Land

- 1 Press **TOOL**
- 2 Choose **Regular Land**
- 3 Press **OK** key to **MARK** at every turning point of land



BHCnav ⁺

Professional GPS for Land Measurement
Quick Guide

NAVA[®] 110



BHC Navigation Co., Ltd.

P/N:136-22-007-01



Install AA Battery:

Remove the battery cover by turning the D-ring counter-clockwise and pulling the cover. Insert AA batteries, observing the proper polarity.

Remarks:
please remove the battery out when device is not in usage.



• Area Measurement

(Make sure GPS is fixed before starting work)

- ① Press **AREA**
- ② Press **OK** at departure point to start
- ③ Press **OK** again at destination to end
- ④ Press **VIEW** to check land profile



• Land Length

(Displacement distance)

- ① Press **Length**
- ② Press **OK** at departure point to start
- ③ Press **OK** again at destination to end



• Price

- ① Press **PRICE**
- ② Roll **OK** key left and right to change price
- ③ Roll **OK** key up and down to change unit
- ④ Roll **OK** key, move to **AREA** and change the unit same way.



• History

- ① Press **TOOL**
- ② Choose **HISTORY** to check historical records
- ③ Roll **OK** key left and right to page up and down

